

PRO 300 firmware upgrade

Note: For installing the last firmware version, the programmer must be provided with the version 1.0.11 or later one before.

- Necessary material:

- PRO 300 with 1.0.11 version or subsequent;
- SD card in FAT 16;
- Last firmware version for programmer;
- PC;

- Previous steps:

- Two new folders will be created: *Programs* and *Channels* the first time you insert the card in the programmer. If the card is not inserted in PRO 300 yet, you should create the folders manually from the PC.

In order to detect the different modules, the programmer must have saved in the *Programs* folder the files of the different groups of devices:

- Download last firmware version available for your programmer. You can find in our website: <http://www.ftemaximal.com/>
- Unzip the file downloaded from the web site in the "Programs" folder of the SD card. It contains:
 - PRO300.UPG

2.1 Updating

Before introducing the SD card in the PRO 300, it is necessary to introduce the updating file in the *Programs* folder of the SD card, and then to connect the PRO 300 with the SD card already inside.

When the programmer starts it will detect the new software version and will offer the possibility of updating the programmer.

Press **OK** to start the updating or **CANCEL** to leave the main menu of the device you are connected to.

If you chose to make the updating, the programmer will follow the next steps:

```
New Firmware:          1.0.11
OK for upgrading
CANCEL to Exit
```

```
SOFTWARE UPDATE
Please wait...
Do not power off!
Erasing:    56%
1.0.11
```

1. Erasing previous firmware

```
SOFTWARE UPDATE
Please wait...
Do not power off!
Erasing:    100%
Erasing:    30%
1.0.11
```

2. Updating Firmware

```
SOFTWARE UPDATE
Please wait...
Do not power off!
Erasing:    100%
Erasing:    100%
END
1.0.11
```

3. Updating finished