

 
## Connections Diagram

### 1. Aerial Connections

- Connect the cable from the satellite dish to LNB IN.


#### Optional 3rd Tuner

- 2x SAT tuners fixed 1 more optional tuner slot for SAT, or Terrestrial/Cable reception
- Connect the cable from the antenna to ANT IN. ( Optional tuner )
- Connect the cable from the satellite dish to LNB IN. ( Optional tuner )

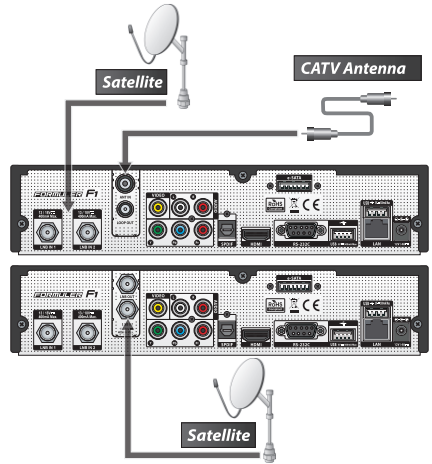


### 2. Receiver to TV With Digital A/V Output

- Connect the HDMI Cable to the HDMI Connector of the TV.
- Connect SPDIF to Digital audio input of the equipment (Digital Audio)

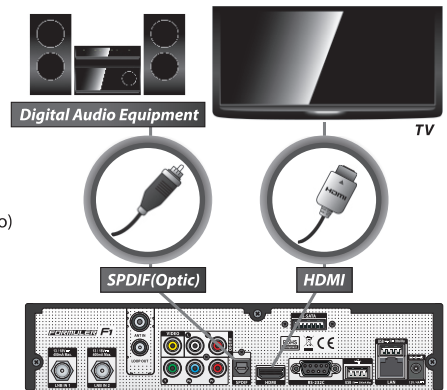

### 3. Composite Video Connection



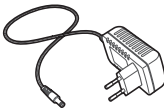
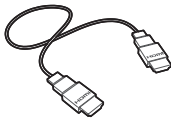

- Connect the Component to the Component input of the TV.
- Connect the RCA to the RCA input of the TV.

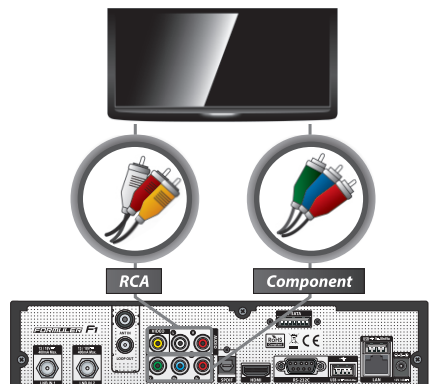

## Troubleshooting

Problem	Solution
<b>Does not display any message on the front panel.</b>	<ul style="list-style-type: none"> <li>✓ Check the main power cable and check that it is plugged into a suitable power outlet.</li> </ul>
<b>No Picture</b>	<ul style="list-style-type: none"> <li>✓ See '<b>Does not display any message on the front panel</b>' above.</li> <li>✓ To match the STB system with your TV system (PAL/NTSC), press V.Format button until a picture is displayed.</li> <li>✓ Check the video output port is firmly connected to the TV or VCR.</li> <li>✓ Check that you have selected the Video Input on your TV.</li> <li>✓ Check the brightness level of the TV.</li> <li>✓ Check the resolution that your TV supports, and set the proper resolution with the remote <i>Resolution</i> button to obtain a picture.</li> </ul>
<b>Poor picture quality</b>	<ul style="list-style-type: none"> <li>✓ See '<b>No Picture</b>' above.</li> <li>✓ Check the signal level, if this is low then tries adjusting the alignment of your dish.</li> </ul>
<b>No Sound</b>	<ul style="list-style-type: none"> <li>✓ See '<b>No Picture</b>' above.</li> <li>✓ Check the volume level of the TV and STB.</li> <li>✓ Check the Mute status of the TV and STB.</li> </ul>
<b>Remote Control does not operate</b>	<ul style="list-style-type: none"> <li>✓ Point remote control directly towards the STB.</li> <li>✓ Check that the STB button lights up when you press any button.</li> <li>✓ Check and replace batteries.</li> </ul>
<b>No or Bad Signal</b>	<p><b>[ For DVB-S2 tuner model only ]</b></p> <ul style="list-style-type: none"> <li>✓ Check the LNB ; Replace the LNB if necessary.</li> <li>✓ Check the cable from the LNB.</li> <li>✓ Check the position of the dish; realign dish if necessary.</li> <li>✓ If you are using a DiSEqC 1.0 switch, check that you have connected and programmed the LNBs to the correct connections on the switch.</li> </ul> <p><b>[ For DVB-T(T2) tuner model only ]</b></p> <ul style="list-style-type: none"> <li>✓ Check the connection of Aerial antenna line.</li> </ul> <p><b>[ Common features for all types of DVB receivers ]</b></p> <ul style="list-style-type: none"> <li>✓ Check the 'Signal Level' and the 'Signal Quality'.</li> </ul>

## Accessories

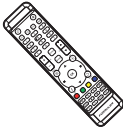				
Remote control	Batteries	Power adapter	HDMI cable	Quick guide