

# TESLA

## User manual

### TESLA SOUND RB150



## 1. BOOT

After unpacking and accessing (output is QC3.0 quick charge (DC 5V 3A,9V 2A, 12V 1.5a) adapter, long press the power button to enter the start up program. At this point, the LED on the front display interface is all lit for 1 seconds for self-check, so as to ensure the normal use of the display screen. After normal display, the power indicator lights up.

## 2. CLOCK SETTING

Press the power button to enter the clock setting program when the LED self-check on the display screen displays 00:00 (the default clock of the machine is 24H). At this point, the number of hours (00:) flicker, through the "+" or "-" key set to the correct number of hours (00: -23:), then short press M key to switch to the minute setting area, at this time the minute (00) flicker, through After setting the "+" or "-" key to the correct number of minutes (: 00-: 59), press the M key to confirm or pause for 3 seconds, the machine will automatically complete the default setting and return to the home screen display interface.

## 3. ALARM SETTING:

After confirming that the clock time is displayed correctly, press M to switch to the setting of alarm 1 (press M again to switch to the setting of alarm 2). At this time, the logo of alarm clock 1 or alarm clock 2 lights up and flashes. Press the power button to enter the setting program (the same as alarm clock 1 and 2).

### 3.1 Timing alarm setting:

hours (00) when flashing, debug to the correct number of hours (00: -23) through the "+" or "-" key, then switch to the minute setting area by pressing the M key. At this time, the minute (00) flashes.

### 3.2 Alarm type selection:

This machine preset has 5 kinds of chord sound alarm and timing FM function (alarm 6) to choose from, through the "+" or "-" key in order or reverse order to choose, when the selection of the corresponding ringtone horn will have a pre-listening effect, the default program is 01. Select OK and press M to enter the next setting.

### 3.3 Alarm ON/OFF:

"ON" or "OFF" of the alarm can be selected by "+" or "-" key. When "ON" is selected, the pattern of the corresponding alarm clock 1 or 2 will light up after exiting the setting to show that the alarm clock is set successfully; When selecting "OFF", the corresponding alarm clock icon is not lit. After setting OK, press M to enter the next setting.

### 3.4 Alarm cycle setting:

the "+" or "-" key can be used to select the cycle of the alarm to ring for ONE day (ONE) or ALL day (ALL). When "ONE" is selected, the alarm will ring for 30 seconds when the clock reaches the time of the timer alarm, and the alarm will automatically exit after 30 seconds when there is no operation. When you choose "ALL", ring a bell at a certain time each day.

3.5 After the above steps are performed in sequence, press the M key to confirm or pause for 3 seconds, and the default setting will be automatically completed and returned to the home screen.

## 4. APPLICATION OF SNOOZE BUTTON:

### 4.1 One-button SNOOZE setting:

when the alarm goes, press SNOOZE to enter SNOOZE mode for one time (or press any other button to end the SNOOZE mode). Five minutes later, the alarm will ring again.

### 4.2 Brightness adjustment of the display:

in any picture, press the "SNOOZE" button to highlight the first time, highlight the second time, highlight the third time... And so on. When there is no key operation for 15 seconds, the machine will enter automatically and keep the general display

### 4.3 Set the clock alarm clock to zero:

when the time is displayed on the main interface, press the "SNOOZE", button for a long time for 5 seconds to enter the restore factory setting program, and everything is set to zero

## 5. FM PLAYING FUNCTION AND TIMING

FM playing function and timing FM playing function (during playing FM, please use the MIC charging cable of the machine to connect to the USB interface).

**5.1** In the clock display the main interface, long press the M key after entering FM broadcast program (FM icon bright) long, short press the switch on the power key can automatically search FM radio, search until after all can search to the FM radio, broadcast program will automatically enter the first FM radio, long press the M key to exit the FM broadcast function again and return to the clock display the main interface.

**5.2** When FM is playing, press the "+" button for the next station; Long press.

**5.3** When setting alarm 1 or 2, switch to "6" in the alarm selection to automatically wake up the FM playing function. The timing time and playing operation are the same as the alarm setting and FM playing operation.

## 6. USB POWER FUNCTION

when using the local type-c power cord, use the FM antenna (MIC charging cable) on the USB interface to provide DC 5V power for other devices.

## 7. THIS MACHINE SUPPLIES POWER TO THE EXTERNAL ADAPTER

Please use the standard type-c (DC5V 2A) charging line of this machine and the DC power supply output for quick charging of QC3.0 (DC5V 3A,9V 2A, 12V 1.5a) for charging. When the machine is charging, the brightness of the display screen switches between brightness modes such as highlighting, general brightness and dark light (keep dark light display state when there is no operation, press any key to activate the bright display).

## 8. WIRELESS CHARGING FUNCTION SETTING

when the wireless charging of the machine works normally, the power supply supplies the external power supply. Please use the adapter with output QC3.0 quick charging (DC 5V 3A,9V 2A, 12V 1.5a) to power the type-c interface of the machine.

**8.1** When charging wireless power, the power cord must be the standard type-c charging cable (DC5V 2A) of the machine, otherwise the charging effect of wireless charging will be affected.

**8.2** After the external power supply is successful, the device with wireless charging function (such as mobile phone) shall be placed on the center area of the wireless charging transmitter (net cloth) at the top of the machine smoothly, so as to ensure the good docking between the wireless charging transmitter and the receiver.

**8.3** Connect to the standard type-c charging line of the machine, and when waiting for charging, there will be a red light on the upper right corner of the cloth, a green light will be on when charging, and the green light will remind you to re-access the type-c charging line.

**8.4** When wireless charging works, the output power of DC 5V can be provided for the USB interface of the machine at the same time, which can be used for charging mobile devices without wireless charging function.

## 9. LOCAL WARNING:

**9.1** If the machine is not used for a long time, please press the power button to enter the background operation mode to ensure the normal service life of the product.

**9.2** Matters needing attention when the machine is used or used: anti-insolation, anti-moisture, anti-corrosion, anti-drop, anti-pressure.

## 10. AUTOMATIC REPAIR FUNCTION OF THE MACHINE SOFTWARE:

in the process of use, if abnormal operation mode or operation jam occurs (the machine freezes), please long press the power button for about 8 seconds (at this time, the power cannot be disconnected), the machine will automatically enter the program repair mode until the normal boot.

# OPERATION INTRODUCTION

1. Product specification: 137\*131.5\*93mm
2. Product material: ABS shell material + hd PC display lens +EVA. non-slip pad + high-elastic wear-resistant cloth net
3. Display size: 5 "LED display clock alarm clock
4. No charging power: DC 5-9v / 850-1000mah for single wireless charging, DC 5-9v / 400-650mah fbr simultaneous FM fiinction and wireless charging
5. The speaker specification: G 66 mm 5w
6. Sensitivity: 85%
7. Frequency width: 80MHZ-108MHZ
8. Chip version: V 5.0
9. Wireless charging standard: WPC+Qi wireless charging standard

